



BRIDGEWOOD WALL

UNIT OF MEASURE

The Unit of Measure for Bridgewood Wall is Each.

PIECES REQUIRED

To calculate pieces required, multiply the wall length, in feet, by 0.285. This will give you the number of pieces required per layer. Then multiply this by the number of layers to determine total quantity required.


INSTALLATION

Final designs for construction must be prepared by a registered professional engineer using the actual conditions of the proposed site.

PALLET INFORMATION

Sold in full pallets only. Contact your local Barkman sales representative for further details.

PALLET CONFIGURATION

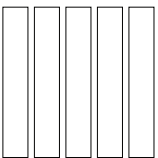

Pallet Top View

SPECIFICATIONS




BRIDGEWOOD WALL	UNIT		PALLET			
	SIZE (H X W X D)	WEIGHT	LAYERS	UNITS	FACE AREA	WEIGHT
	MM 152 x 1067 x 203	KG 77.56	3	15	M2 2.44	KG 1166.2
	IN 6 x 42 x 8	LB 171			SQFT 26.25	LB 2571

STANDARD COLOURS



Cedar Brown

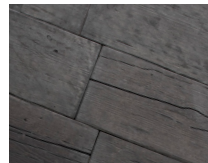

Weathered Grey

PRODUCT CODES

COLOURS	ITEM NO.
Cedar Brown	138331
Weathered Grey	138332