

Sweep Sand into Joints



Compact Pavers



Sweep Sand in joints again



Re-compact Pavers



Remove excess sand from corners



Final Sweep




Gently blow off any remaining sand off of pavers before applying water



Sand should be just below the
top of the paver



Gently begin watering starting
with a fine mist

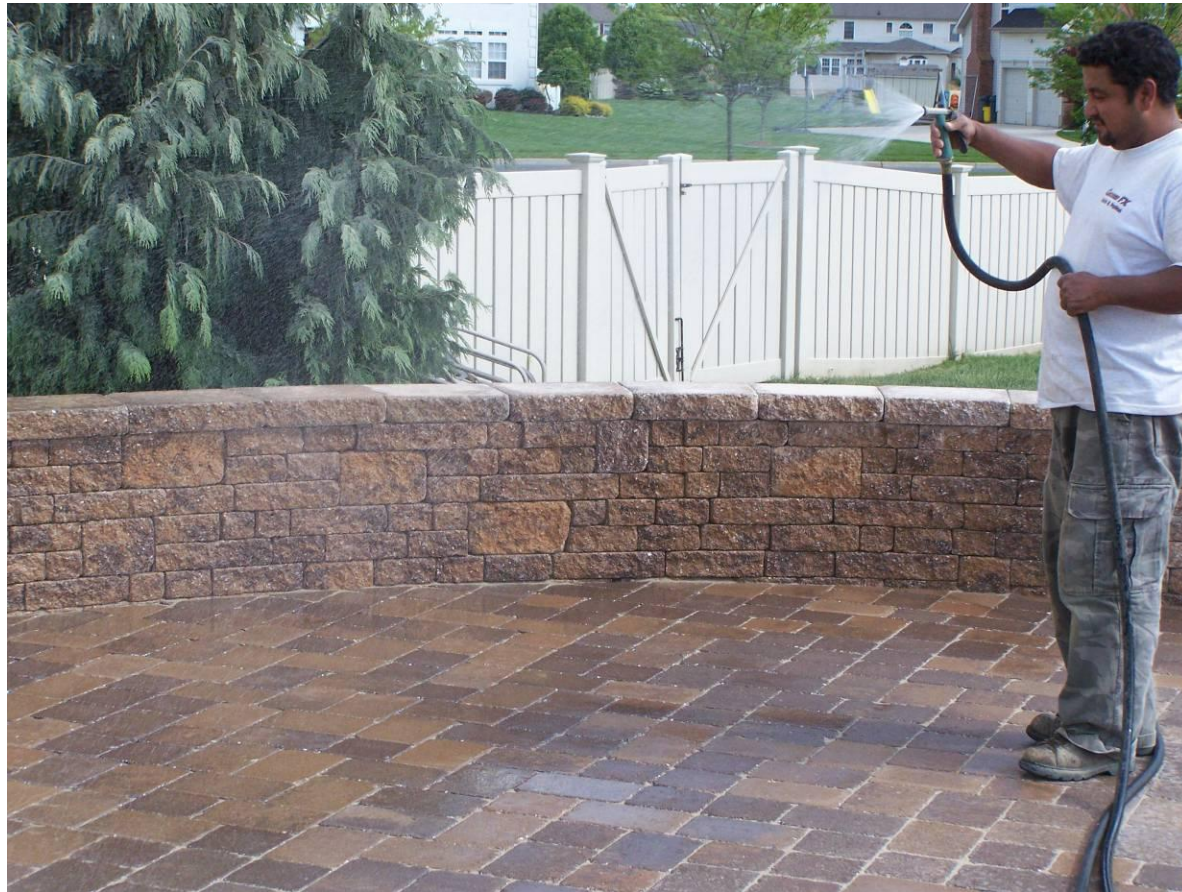

Gradually add more moisture by
repeating 3 to 4 times



Check joints to make sure sands are wet to total depth of joint



Completed Project

